

# FOREO

## LUNA™

### FULL USER MANUAL


#### THE BEAUTY DEVICE THAT DOES IT ALL

Congratulations on taking the first step towards flawlessly beautiful skin by acquiring the LUNA™ T-Sonic™ facial-cleansing and anti-aging system. Before you begin to enjoy all the benefits of sophisticated skincare technology in the comfort of your home, please take a few moments to carefully read the instructions in this manual.

#### LUNA™ OVERVIEW

Our groundbreaking new skincare system will leave the skin looking naturally beautiful and radiant, as well as smoother and younger.

Used as part of your daily cleansing routine, the LUNA™'s Cleansing Mode provides a much deeper clean than washing by hand, enhancing the absorption of your favorite skincare products. In Anti-Aging Mode, the LUNA™ works by gently directing lower-frequency pulsations beneath the skin's surface to help diminish the visible signs of aging. Regular use not only promises a fresher, more radiant complexion right from the start, it also lays the foundation for a lifetime of younger-, healthier-looking skin.

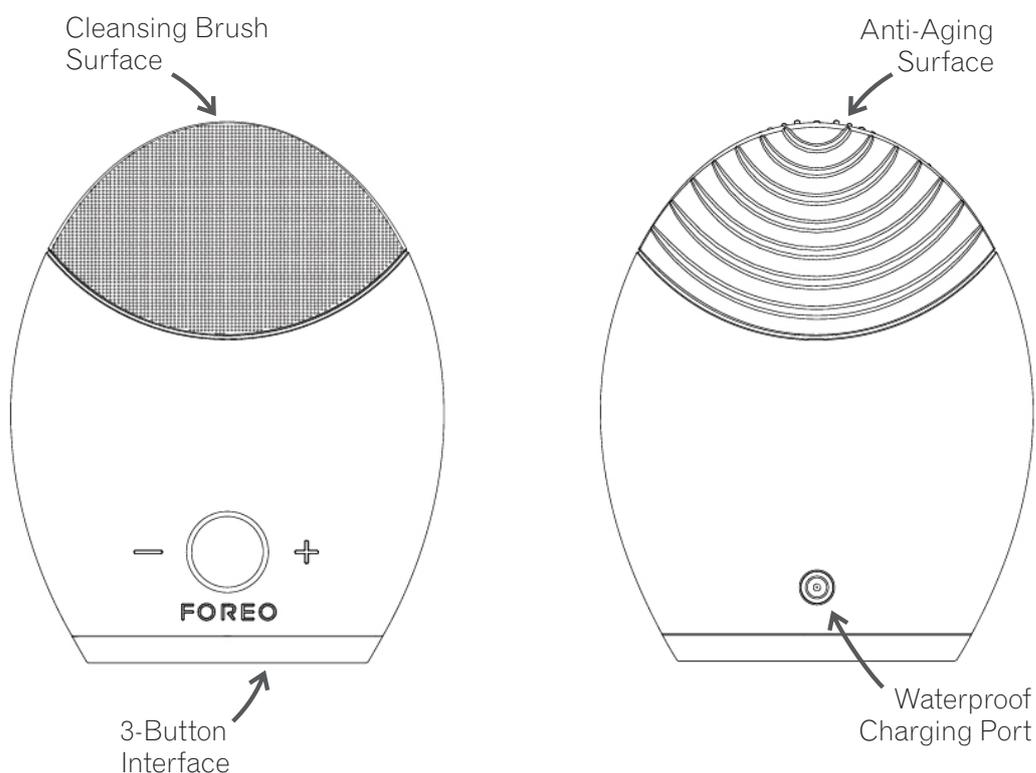

## USING YOUR LUNA™

The LUNA™ is available in 3 different models, each with a cleansing brush that suits sensitive/normal, combination or ultra-sensitive skin. To maximize the skincare benefits of the LUNA™, we suggest you use it for 2 minutes each morning and evening.

### MODE SELECT

1. Press the center button once to turn on your LUNA™. When activated, it will be in Cleansing Mode.
2. Press the center button again to put the device on Standby (on Standby, the indicator will emit a steady glow and the pulsations will stop, giving you the chance to rinse your face).
3. Press the center button a third time to activate the Anti-Aging Mode.
4. Press the center button once more to deactivate your LUNA™.

The intensities of the LUNA™'s Cleansing and Anti-Aging Modes are adjustable for comfort using the +/- buttons, with a memory function for the Cleansing Mode that will remember your preferences for the next time the device is used.

The individual stages of FOREO's cleansing and anti-aging routines are described below. After each stage of these routines, you will feel the T-Sonic™ pulsations momentarily pause and see the indicator light flash, prompting you to move on to the next area of your face.

Note: The LUNA™ may be locked when first unboxed – unlock it by holding down the + and – buttons together. The light will flash to indicate that your device is unlocked. Should you wish to lock your device for travel convenience, follow the same procedure.

## CLEANSING MODE

Channeled through smooth, silicone touch-points, T-Sonic™ pulsations help to unclog pores of dirt, oil and makeup residue, and remove dead skin cells.


Try spending around 15 seconds cleansing each zone of your face; after this interval the LUNA™'s T-Sonic™ pulsations will pause momentarily.



1. Remove all makeup, then dampen your face and apply your regular cleansing product. Turn on your LUNA™ by pressing the center button once, activating the Cleansing Mode.




2. Start cleansing at your chin with gentle upward strokes along your jaw to your ear, moving gradually higher to cleanse the whole cheek.

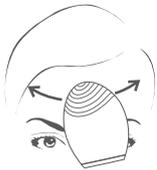

3. Change to the other side of your face and repeat step 2.

4. Then, starting from the center of your forehead, cleanse the entire region with gentle outward strokes to both sides.

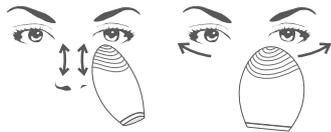

5. Now cleanse one side of the nose by gently gliding the LUNA™ up and down, then change to the other side of the nose. We suggest reducing the LUNA™'s pulsation intensity with the – button before delicately cleansing the under-eye region using outward strokes.

After 1 minute, you will feel the pulsations pause 3 times in quick succession. Press the center button once more to put the LUNA™ on Standby, then rinse your face to complete the 1-minute cleansing routine. Please note that to prevent overuse, the LUNA™ will automatically switch itself off if left for 3 minutes in Cleansing Mode.

## ANTI-AGING MODE

The LUNA™'s Anti-Aging Mode diminishes the appearance of fine lines and wrinkles, and leaves the skin looking firmer and more elastic.

From Standby, press the center button to activate the Anti-Aging Mode. Try spending around 12 seconds on each stage of the routine; after this interval the LUNA™'s pulsations will pause momentarily. Close your eyes, relax your face and press the LUNA™'s anti-aging surface to the following wrinkle-prone areas, where muscle tension can cause worry lines, crow's feet and laugh lines:

1. Region between the eyebrows
2. Right temple
3. Right nasolabial fold
4. Left nasolabial fold
5. Left temple




After 1 minute, you will feel the pulsations pause 3 times in quick succession. Please note that to prevent overuse, the LUNA™ will automatically switch itself off if left for 3 minutes in Anti-Aging Mode.

## CHARGING

- Insert the DC connector into the LUNA™'s charging port.
- Insert the mains plug into a socket. The LUNA™'s LED will flash repeatedly to indicate the battery is charging. When it is fully charged (after approximately 1 hour), the LED will emit a steady glow.
- When the battery is running low, the LED on your LUNA™ will emit a blinking white light.

Only use the charger supplied by FOREO with your LUNA™. Always charge the LUNA™ before its first use, do not use the device while charging and do not charge for more than 24 hours.

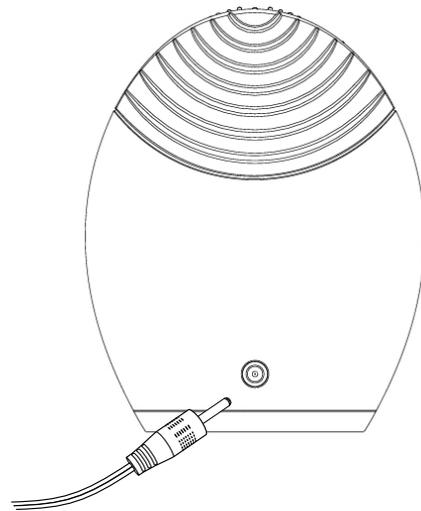

## CLEANING, STORAGE AND SAFETY

The life span of your LUNA™ will be greatly increased with proper maintenance and care.

Always clean the LUNA™ thoroughly after use. Wash the brush surfaces with water and soap, then rinse with clean water. Pat dry with a lint-free cloth or towel. Never use cleaning products containing alcohol, petrol or acetone, as they may irritate the skin.

Avoid using clay-based, silicone-based or grainy cleansers, exfoliators or scrubs, as they may damage the LUNA™'s soft silicone touch-points.

Avoid leaving your LUNA™ in direct sunlight and never expose it to extreme heat or boiling water.

For reasons of hygiene, we do not recommend sharing your LUNA™ with anyone else.

Cleansing with the LUNA™ should be comfortable – if you experience discomfort, discontinue use immediately and consult a physician. If you have a skin condition, please consult a dermatologist before use. Exercise particular care when cleansing the under-eye regions and do not bring the device into contact with the eyelids or eyes themselves.

Close supervision is necessary when this device is used by, on, or near children. Never use the device, charger or charging cable if they are damaged. When charging, make sure the charger is dry, and do not charge the LUNA™ in any location where it or the charger may become immersed in water. Use this device only for its intended use as described in this manual.

Given the efficiency of the FOREO cleansing and anti-aging routines, we recommend that you do not use the LUNA™'s Cleansing or Anti-Aging Modes for more than 3 minutes at a time.

## TROUBLESHOOTING

### LED does not pulse when charger is connected?

- Battery is fully charged, ready for up to 450 full cleansing and anti-aging routines.
- Battery is drained and will require several minutes to acknowledge charging cable.
- Charging cable is not properly connected. Check socket and charging port.

### The LUNA™ does not activate when the center button is pressed?

- Battery is empty. Recharge your LUNA™.
- Interface is locked. Unlock it by holding down + and – buttons together.

### The LUNA™ cannot be switched off and/or interface buttons do not respond?

- Microprocessor is temporarily malfunctioning. Connect the charging cable to restore function to normal.

### The LUNA™'s silicone surfaces have degraded to a sticky or bubbly texture?

- Discontinue use. Silicone is highly durable, but degrades under certain conditions – consult this manual's Cleaning, Storage and Safety section for how to prevent this.

If you experience any other problems with your LUNA™, or if you have any questions regarding its operation, please visit the Customer Care section of [www.foreo.com](http://www.foreo.com) and fill in the **Help Desk** form.

## FOREO 2-YEAR LIMITED WARRANTY AND 10-YEAR QUALITY GUARANTEE

FOREO warrants this device for a period of TWO (2) YEARS after the original date of purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify FOREO during the 2-year warranty period, FOREO will, at its discretion, replace the device free of charge.

The warranty covers working parts that affect the device's function. It does NOT cover purely cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or disassemble the device (or its accessories) will void the warranty.

For any warranty claim, reasonable evidence must be provided that the date of the claim is within the warranty period. For this reason, please keep your original purchase receipt for the duration of the warranty period.

To claim your warranty, you must first register and log in to your account on [www.foreo.com](http://www.foreo.com), then select the option to make a warranty claim. You will be sent a Return Merchandise Authorization (RMA) number which should be returned with the FOREO product to your nearest FOREO office. Shipping costs are non-refundable. This undertaking is in addition to your statutory rights as a consumer and does not affect those rights in any way.

As a continuation of the terms of FOREO's TWO (2) Year Limited Warranty, FOREO's TEN (10) Year Quality Guarantee makes owners eligible to purchase a new device from [www.foreo.com](http://www.foreo.com) for 50% of the listed price should a manufacturing defect be discovered in this time. See the Customer Care section of [www.foreo.com](http://www.foreo.com) for full terms and conditions.

## DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this device should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this device is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by inappropriate waste handling of the product. The recycling of materials will also help conserve natural resources.

For more information about the recycling of your device, please contact your local household waste disposal service or your place of purchase.



## SPECIFICATIONS

<b>MATERIALS:</b>	Body-safe silicone & ABS
<b>COLOR:</b>	White/Light Blue/Pink
<b>SIZE:</b>	100 x 80 x 32 mm
<b>WEIGHT:</b>	100 g
<b>BATTERY:</b>	Li-ion 500 mAh 3.7 V
<b>CHARGING:</b>	60 min
<b>USAGE:</b>	up to 450 uses
<b>STANDBY:</b>	90 days
<b>FREQUENCY:</b>	125 Hz
<b>MAX NOISE LEVEL:</b>	50 dB
<b>INTERFACE:</b>	3-button

**Disclaimer:** Users of this device use it at their own risk. Neither FOREO nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this device.

Model may be changed for improvements without notice.

©2013 FOREO AB. ALL RIGHTS RESERVED.

IMPORTER AND DISTRIBUTOR IN EU: FOREO AB, BIRGER JARLSGATAN 22, 114 34 STOCKHOLM, SWEDEN

IMPORTER AND DISTRIBUTOR IN US: FOREO INC., 3565 S. LAS VEGAS BLVD. #159, LAS VEGAS, NV 89109, USA

DESIGNED AND DEVELOPED BY FOREO SWEDEN